



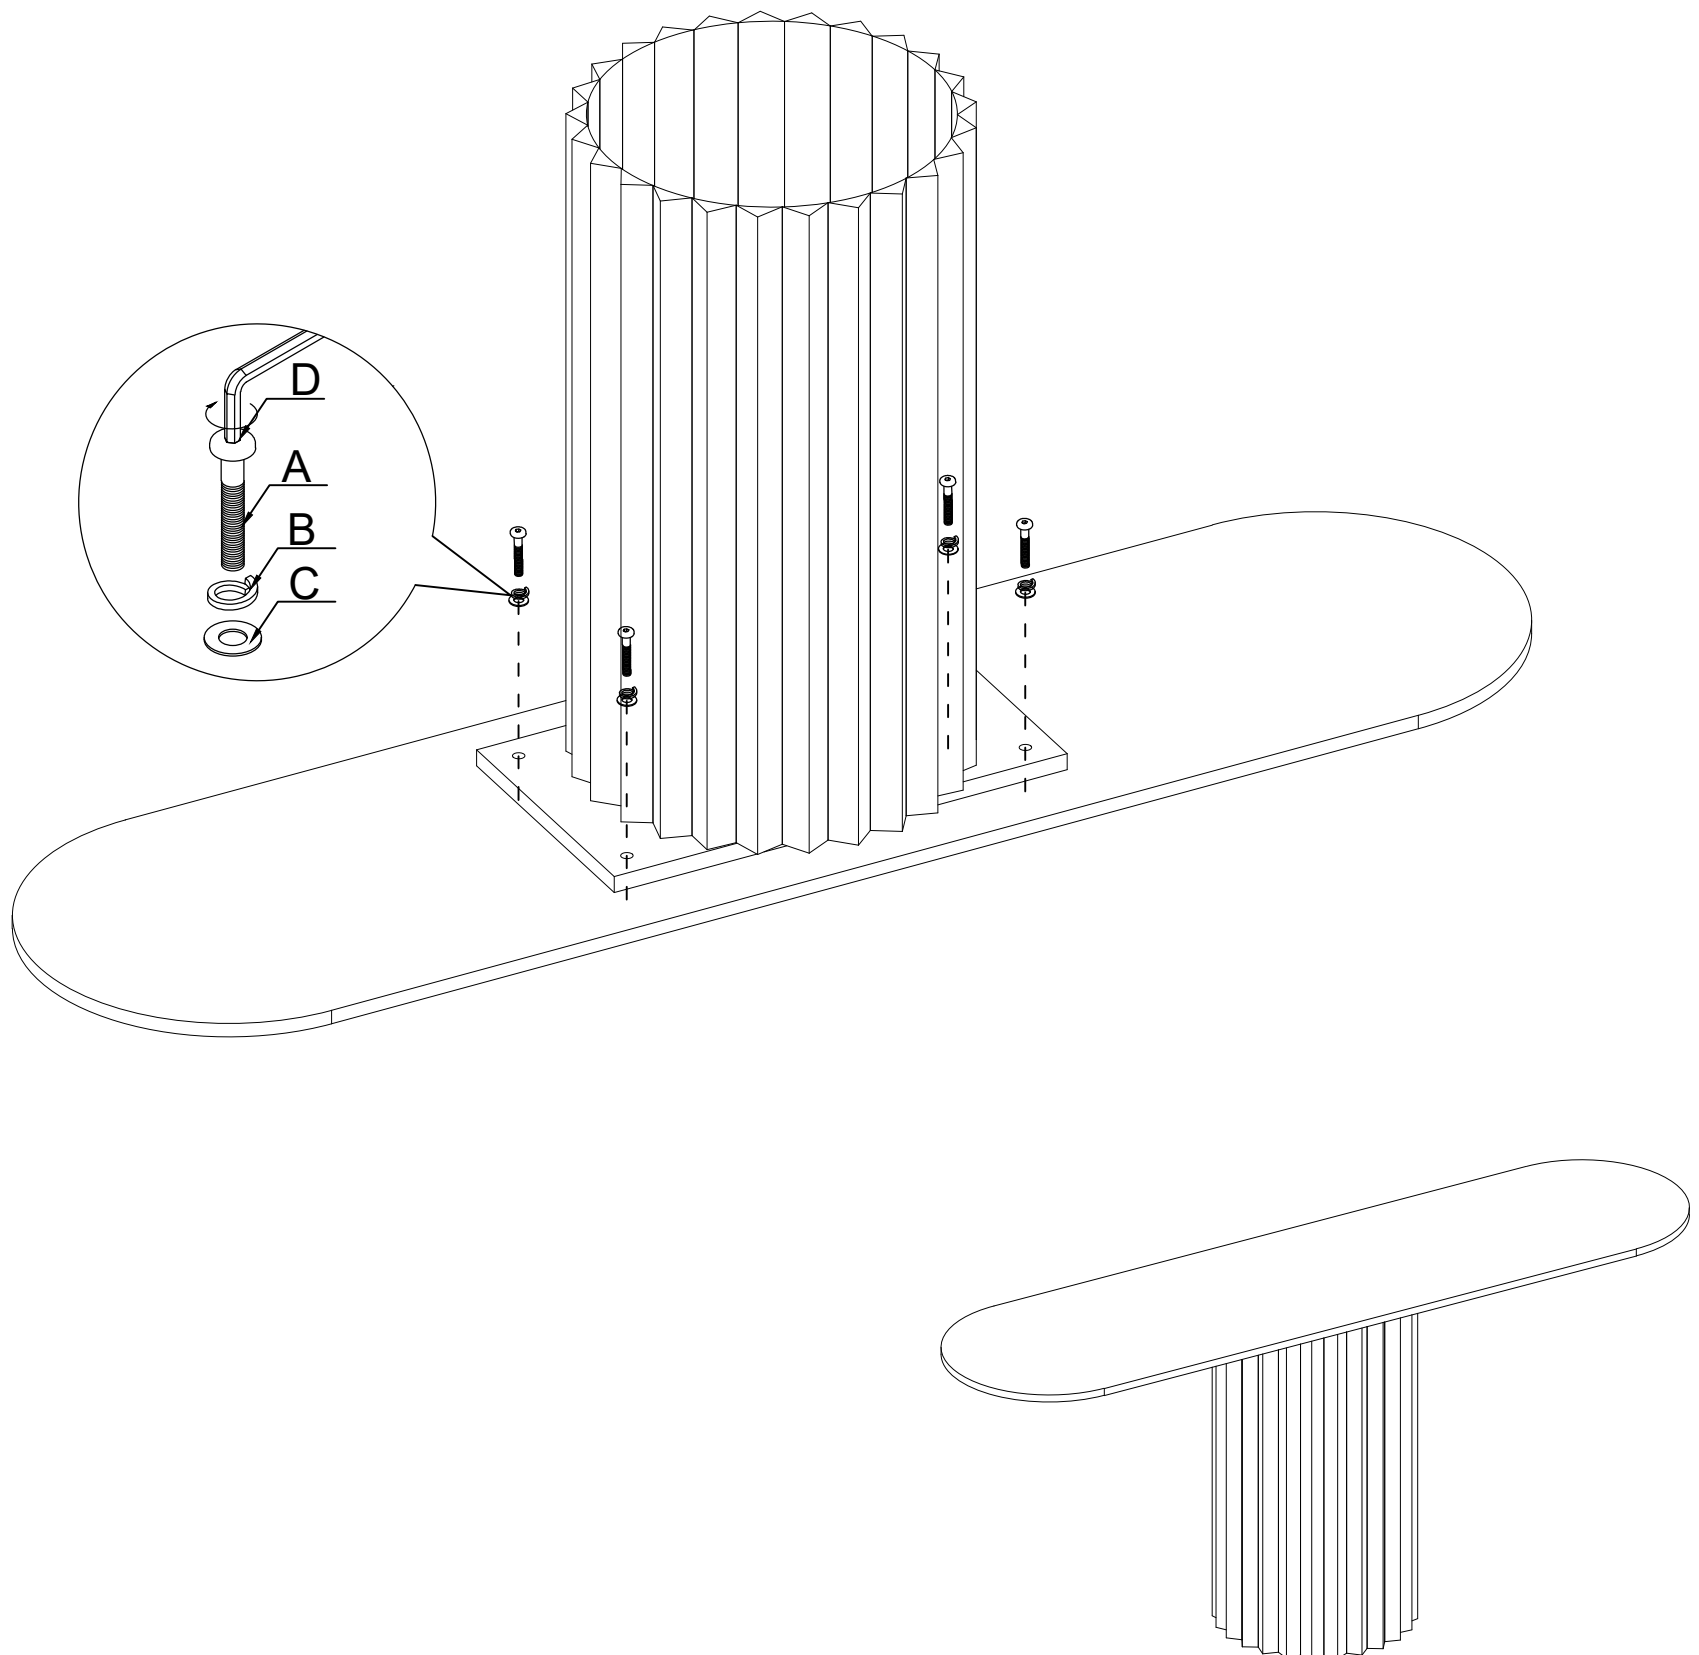


# HORGANS

## Assembly Instructions - Page 1

| NO. | ITEM  | DESCRIPTION  | SPEC. | QTY  |
|-----|---|--------------|-------|------|
| A   |  | Hexagon bolt | M8×30 | 4PCS |
| B   |  | Lock washer  | M8    | 4PCS |
| C   |  | Washer       | 20×8  | 4PCS |
| D   |  | Allen key    | M8    | 1PC  |










# HORGANS




Assembly Instructions - Page 2

## Anti Tip Kit - steps to attach wall anchors



| NO. | ITEM   | DESCRIPTION       | SPEC. | QTY  |
|-----|--|-------------------|-------|------|
| A   |   | Anti-tip belt     |       | 2PCS |
| B   |   | Screw             | M4x20 | 4PCS |
| C   |   | Screw             | M4x40 | 4PCS |
| D   |  | Plastic expansion |       | 4PCS |

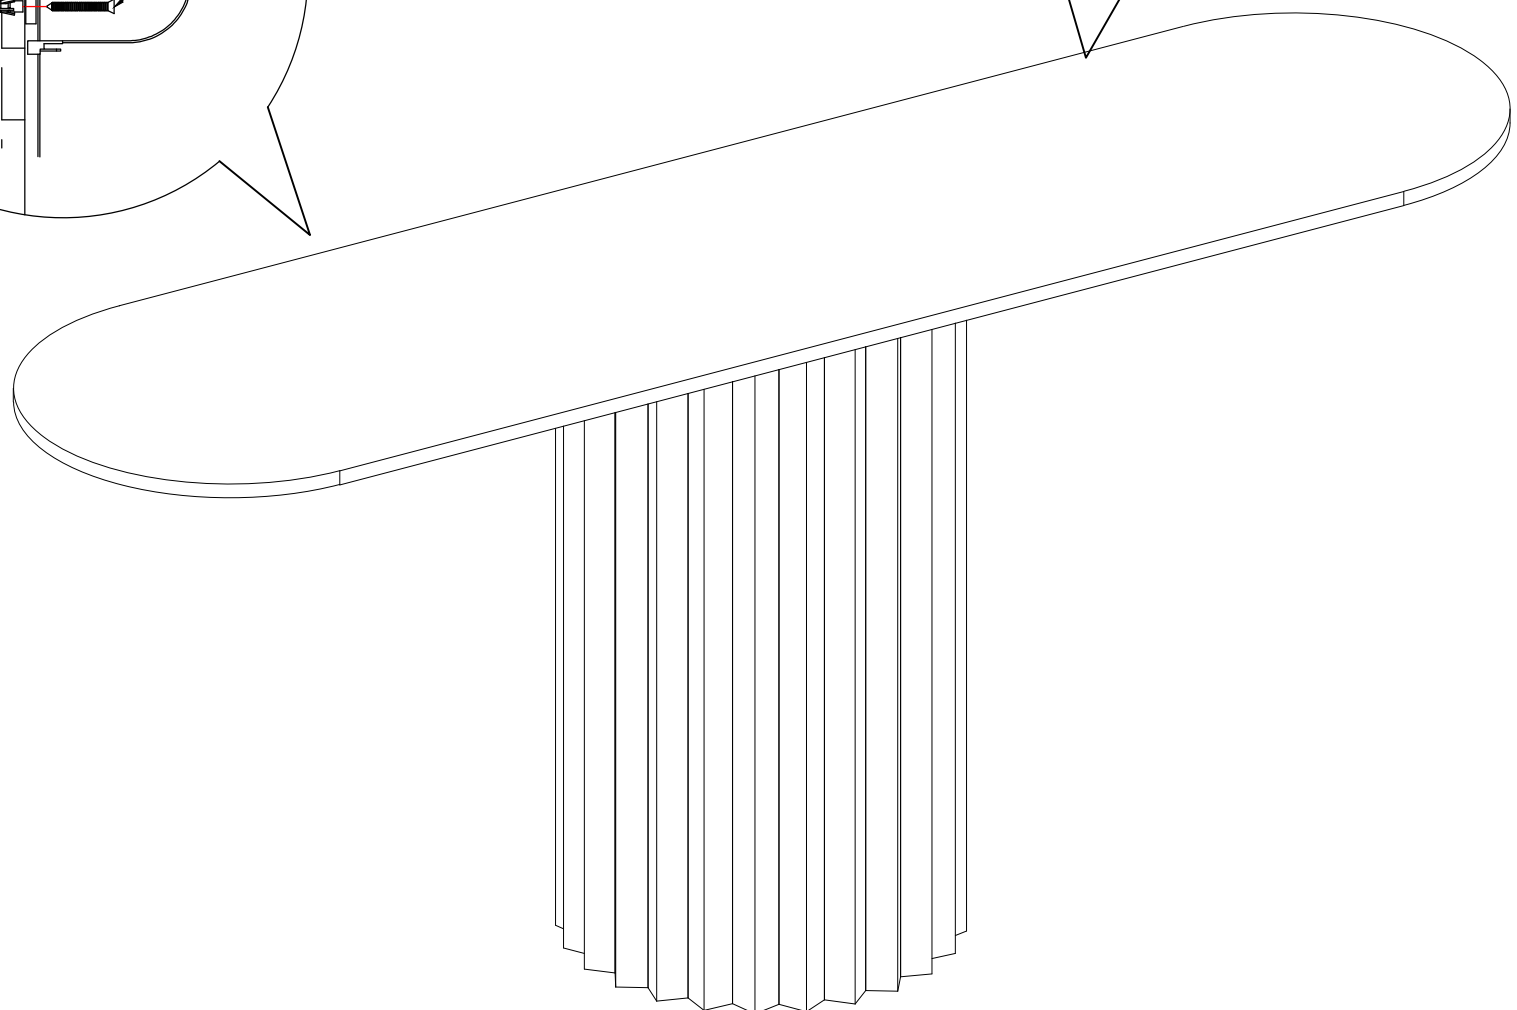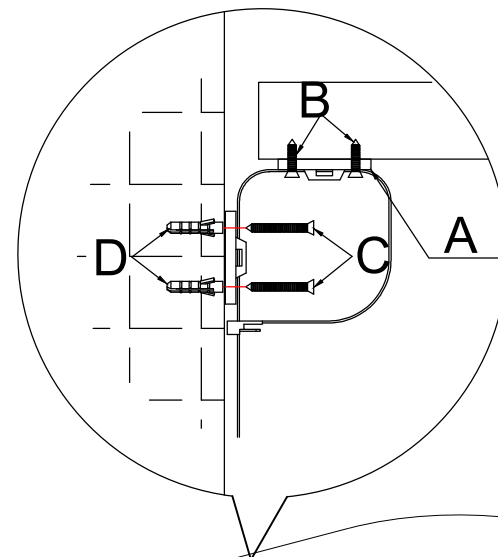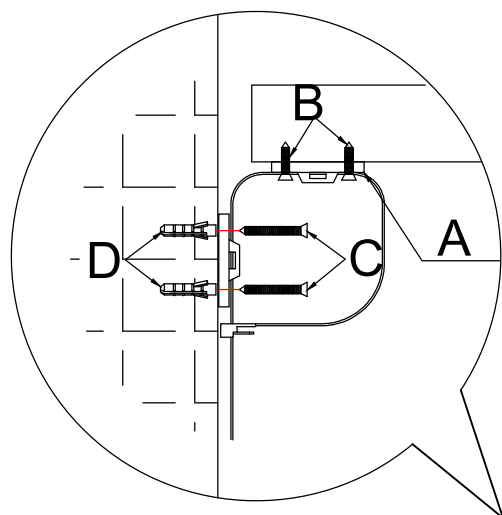
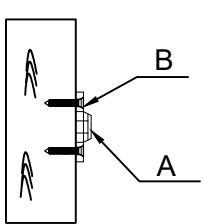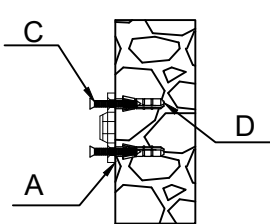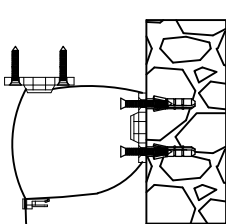
|  |  |  |
|--|--|--|
| <p><b>STEP.1</b></p>  | <p><b>STEP.2</b></p>  | <p><b>STEP.3</b></p>  |
|--|--|--|