
HORGANS


Assembly Instructions

PKG	Description	QTY
A	Travertine Top	1
B	Sideboard - Body	1
No.	Part	QTY
1	Adjustable Legs M6*15	4
2	Plastic/Rubber Pads Ø20*2mm	10

Step 1

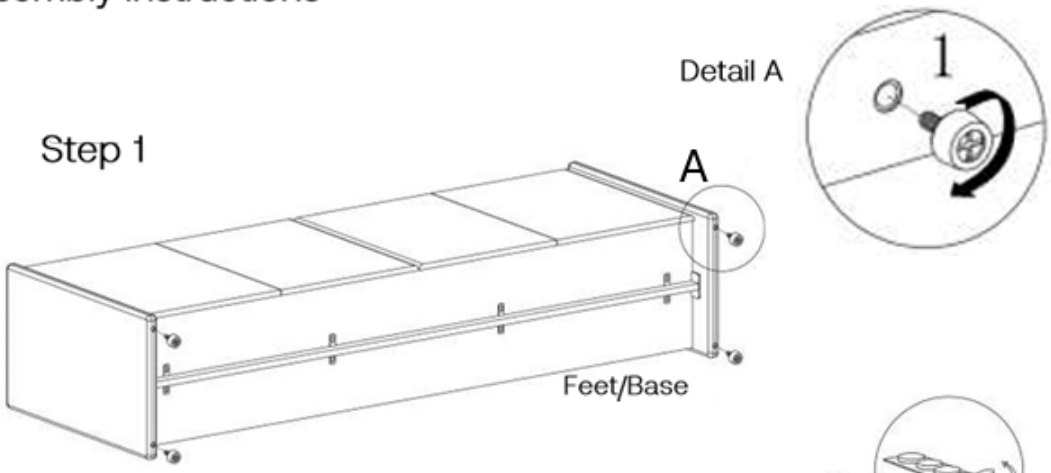


Step 2

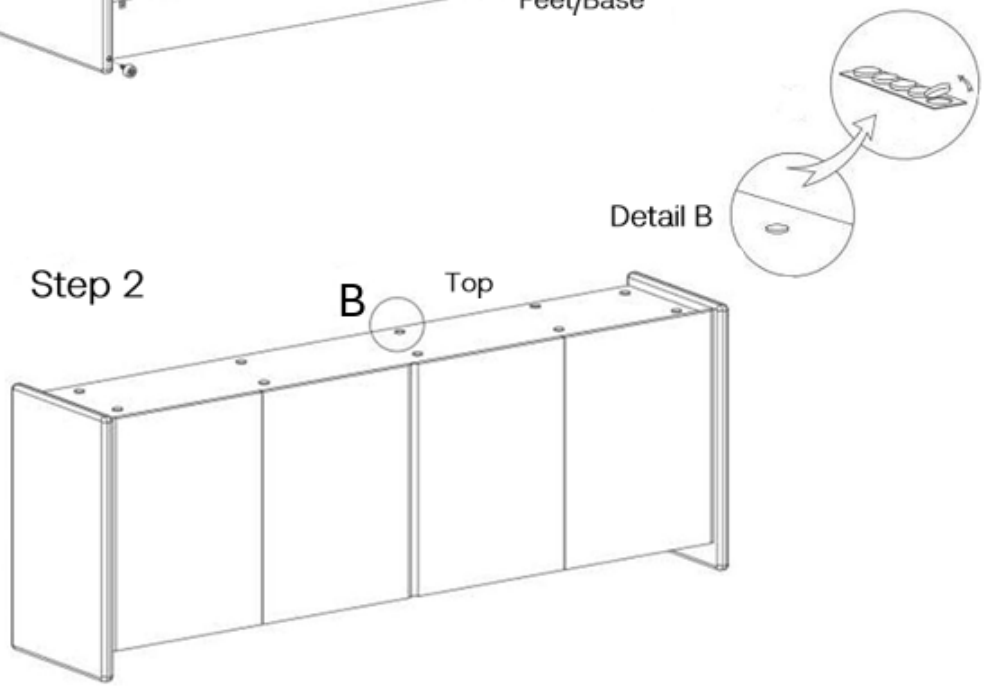

Step 3

CAUTION: Use 4 people to safely lift and place the travertine top onto the cabinet.

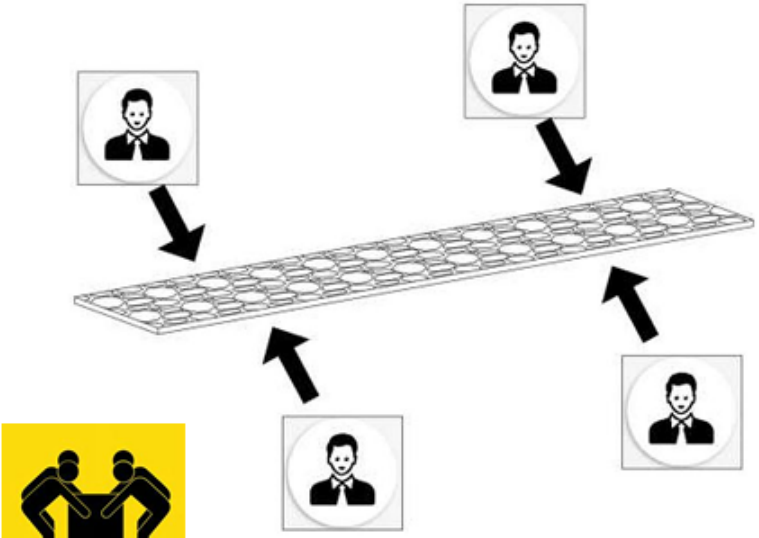




Armand Sideboard

HORGANS


Assembly Instructions

Step 4




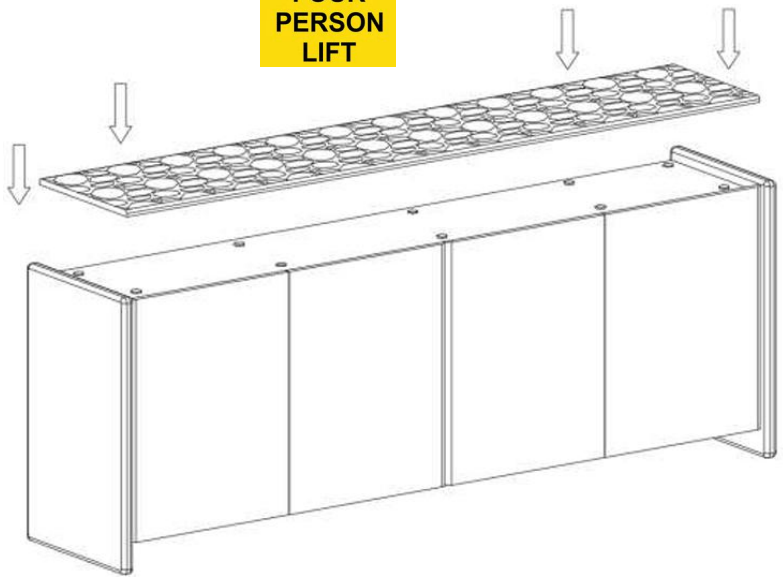

Step 5

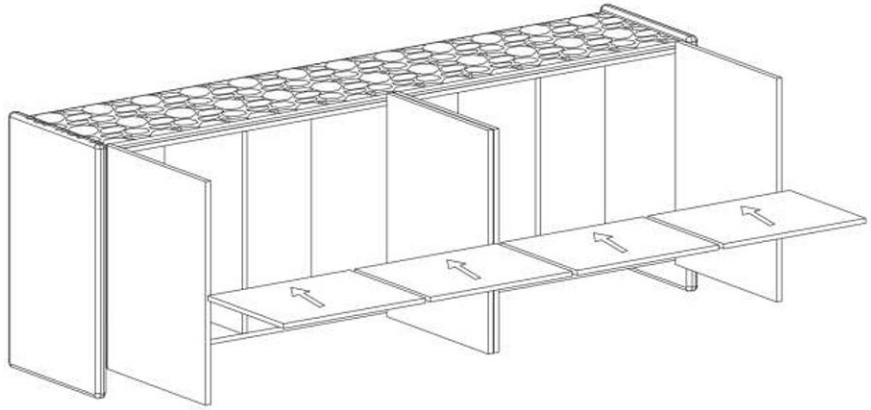

Fully
Assembled

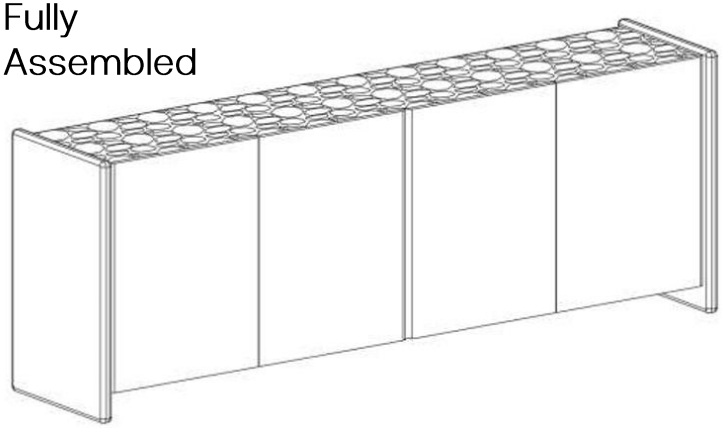

Armand Sideboard