



HORGANS

Assembly Instructions

Step 1

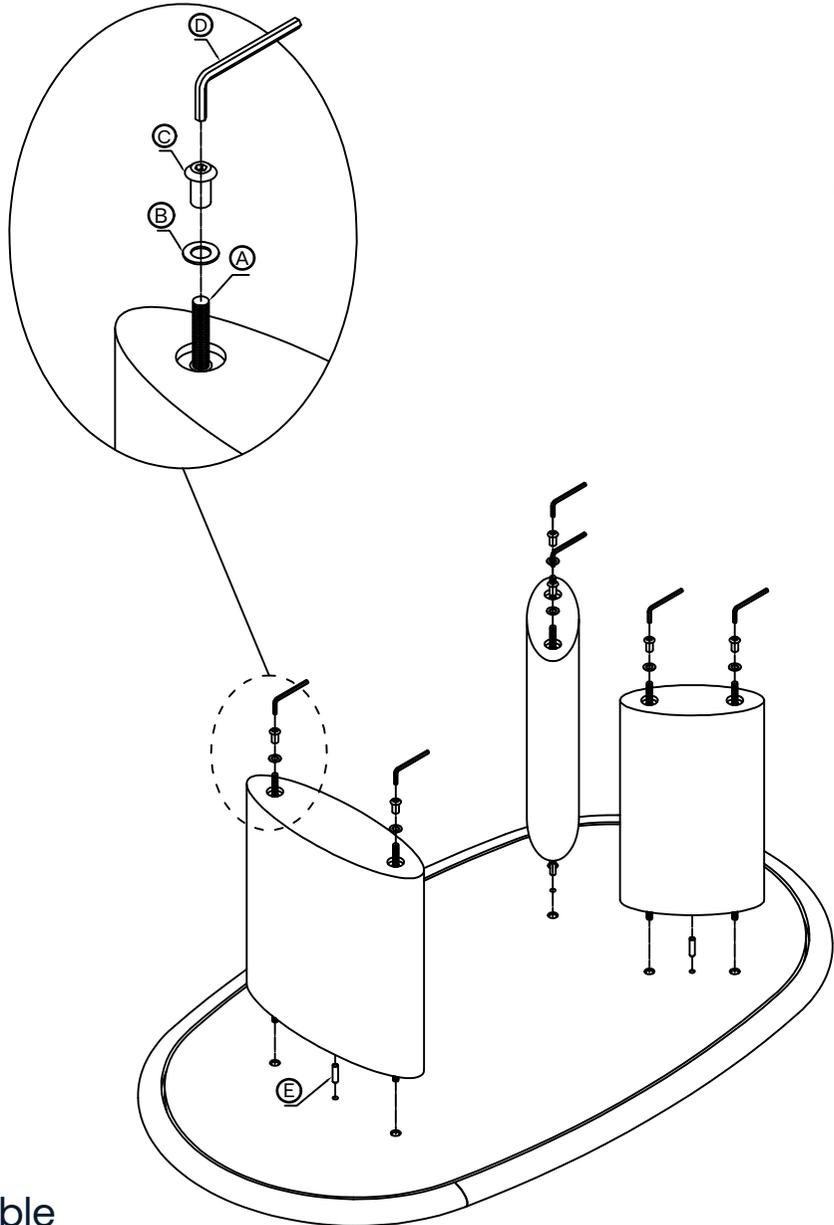

Step 2

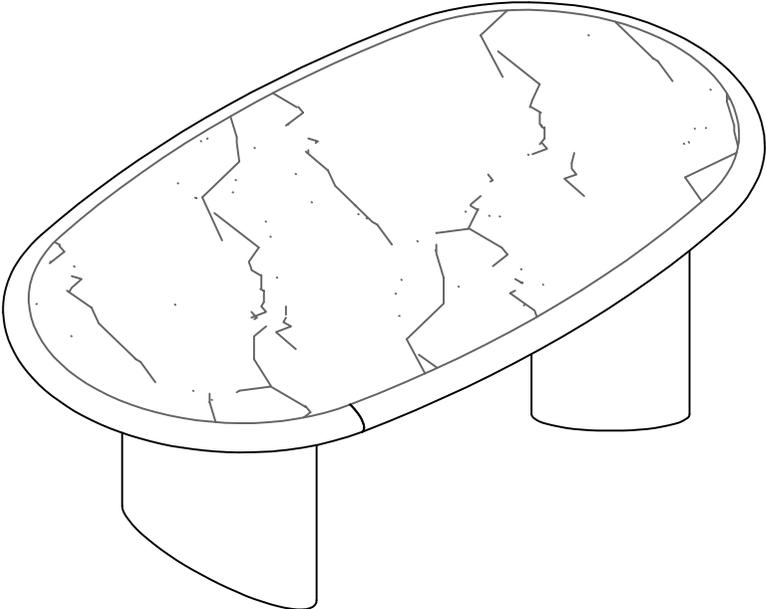

**TIGHTEN BY
HAND ONLY**

**DO NOT USE
POWER TOOLS**

ID	Description	QTY
A	M8 x 365	6
B	Ø 20 x 10 x 2	6
C	M8	6
D	5mm	1
E	Ø 8 x 30	3