
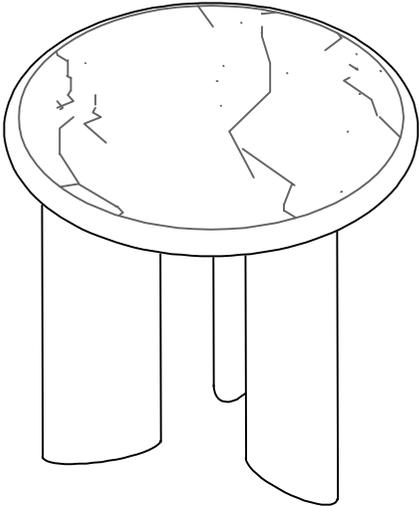


HORGANS

Assembly Instructions

Step 2

Step 1

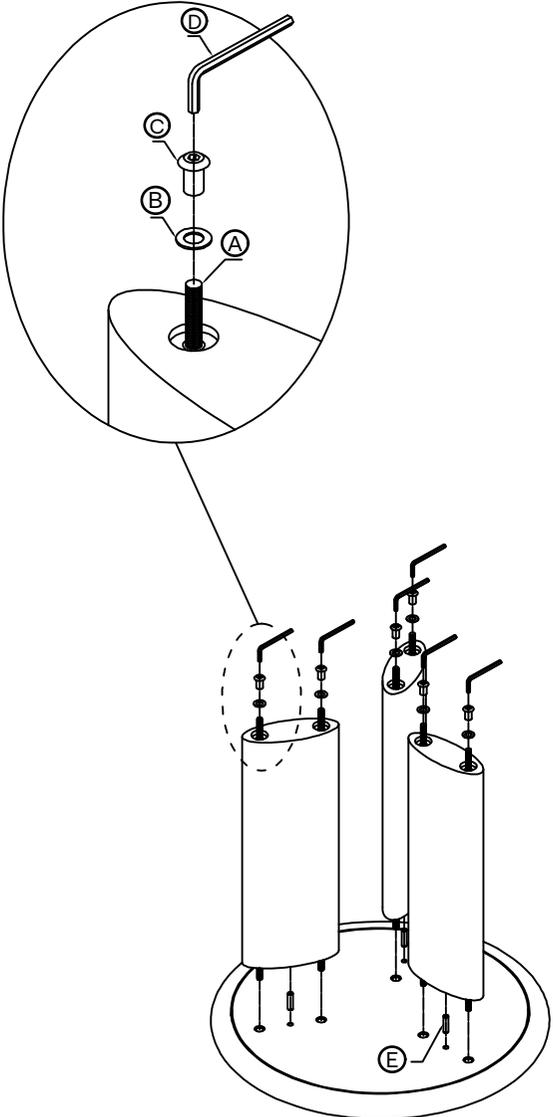

ID	Description	QTY
A	 M8 x 435	6
B	 Ø 20 x 10 x 2	6
C	 M8	6
D	 5mm	1
E	 Ø 8 x 30	3