



HORGANS

Assembly Instructions


Step 1

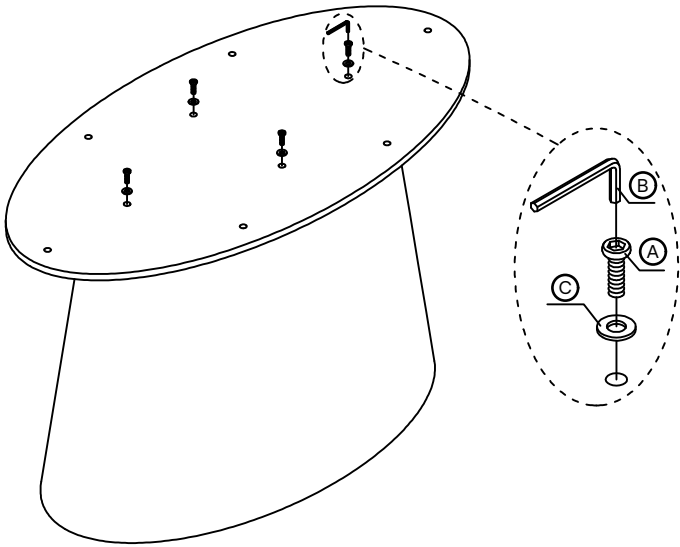

Step 2

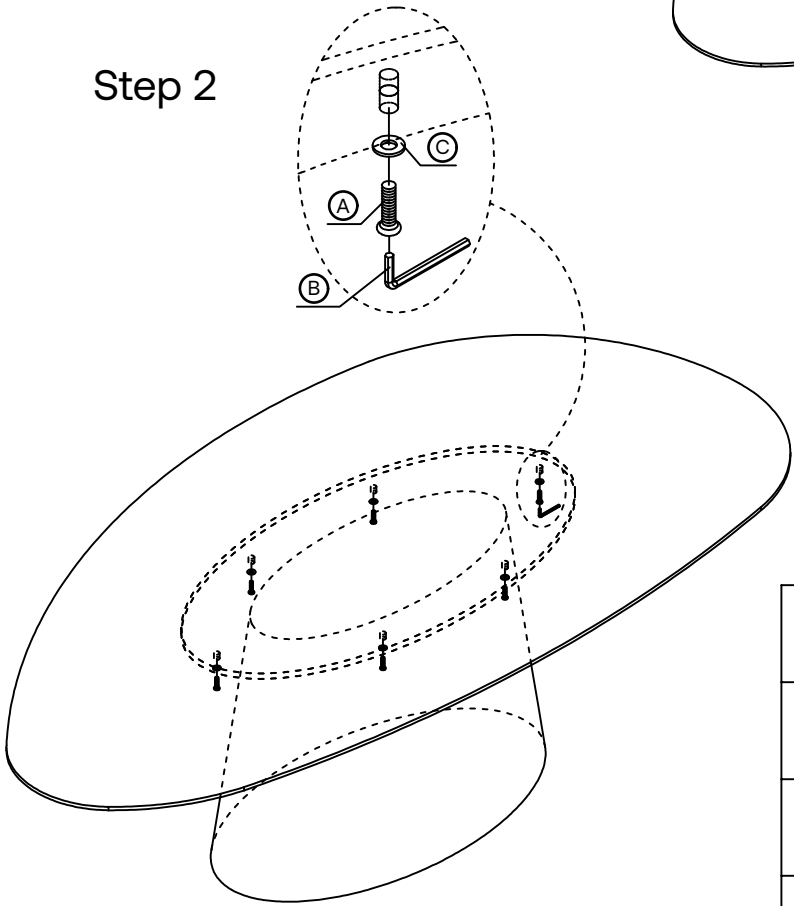

Step 3

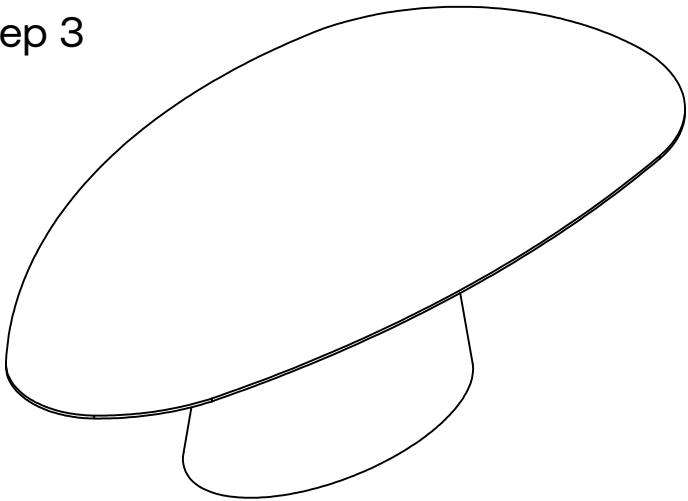

TIGHTEN BY
HAND ONLY
DO NOT USE
POWER TOOLS

ID	Description	QTY
A	 M8x30	10
B	 5mm	1
C	 Ø 17x Ø 8x2	10