



HORGANS



Assembly Instructions



ID	Description	QTY
A	 Top	1
B	 Base	2
C	 Support Bar	4
D	 Bolt	8
E	 Washer	8
F	 Wrench	1

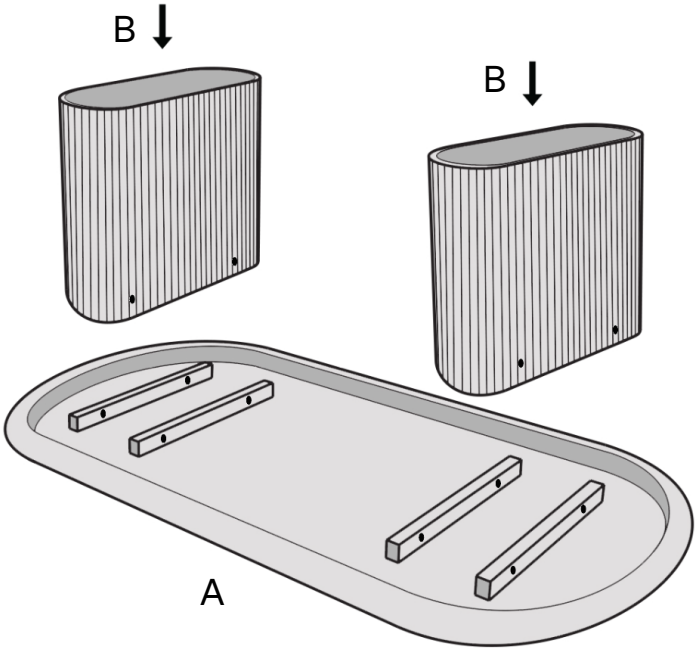

1. Place legs (B) inbetween wooden beams.

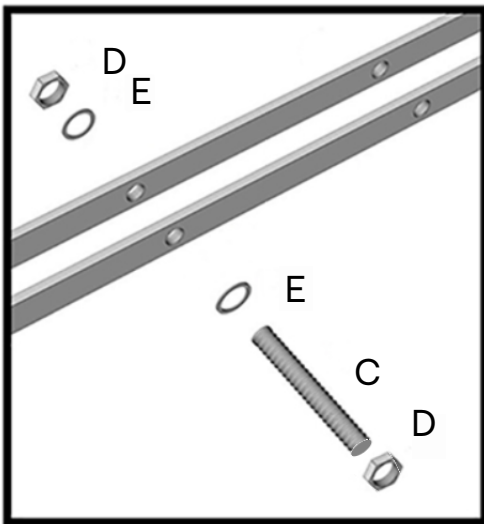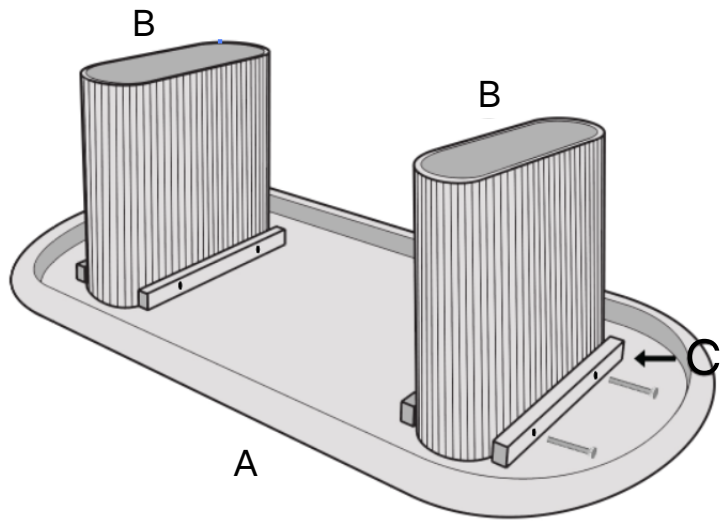

2. Centre the legs (B) with the allocated holes and insert support bars (C).
3. Place bolt (D) and washers (E) on the end of the support beams.
4. Once in position, use the wrench to tighten (F).