


# HORGANS

## Assembly Instructions





TOP (A) x 1

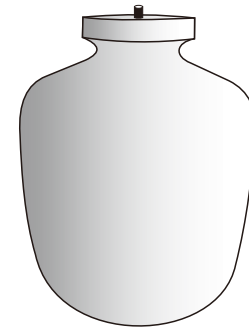


BASE (B) x 1

Step 1  
Place Female Thread (Top)  
into Male Thread (base).

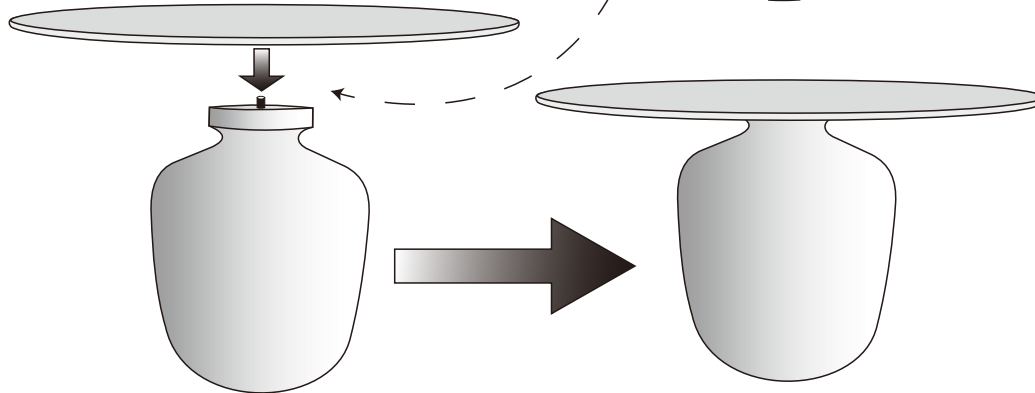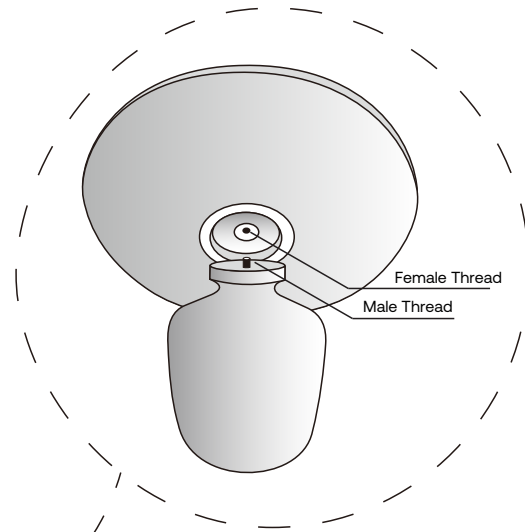

Step 2  
Turn clockwise to tighten.

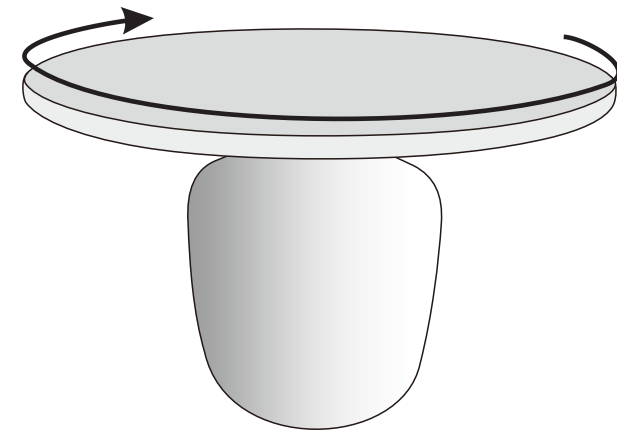

TIGHTEN BY  
HAND ONLY  
DO NOT USE  
POWER TOOLS