HORGANS

Assembly Instructions

Step 1

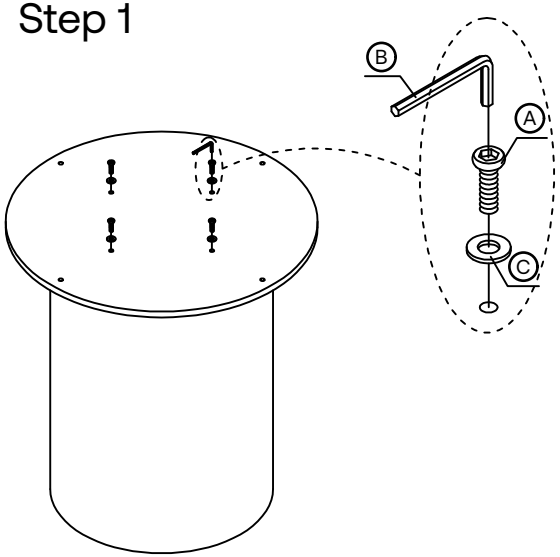

Step 2

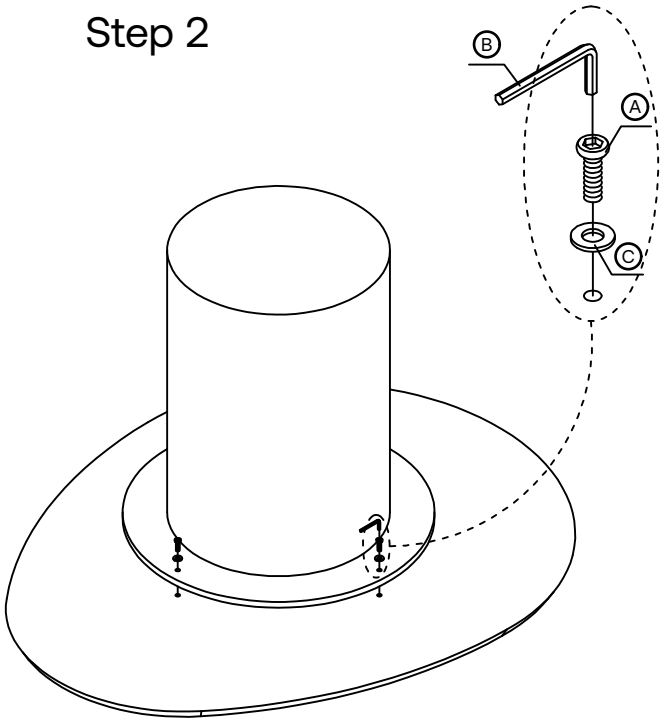

Step 3

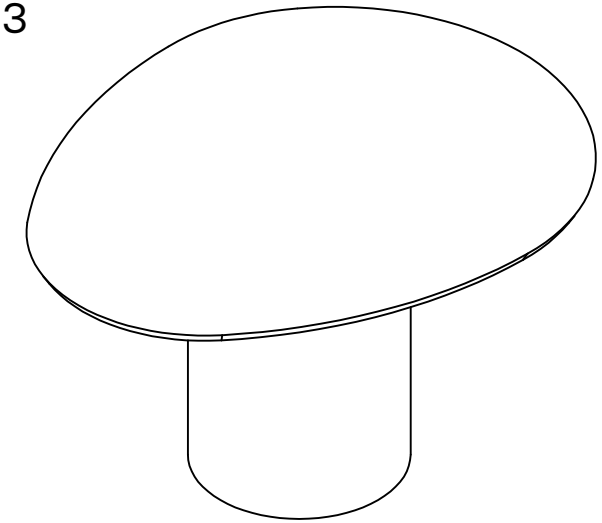

TIGHTEN BY HAND ONLY

DO NOT USE POWER TOOLS

ID	Description	QTY
A	M8x35	8
B	6mm	1
C	Ø 17x Ø 8x2	8